


3D brick

1

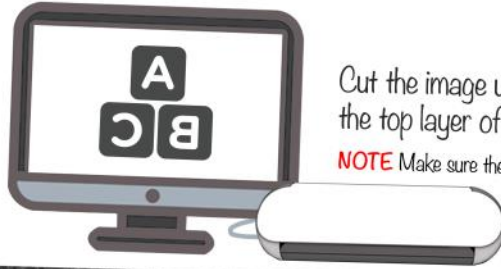

Cut the image using a plotter or contour cutter. Only cut the top layer of material and not the clear transfer liner.

NOTE Make sure the image is reversed in your cutting software.

2



Weed away any excess material until the finished image is left on the clear release liner.

This is called 'weeding'


TIP Weeding tweezers make this process quick and easy.

3

Pre-heat the T-shirt for 5 seconds to remove any moisture. Place the image or design face down onto the garment. Once positioned cover the design using a silicone sheet for protection.



4

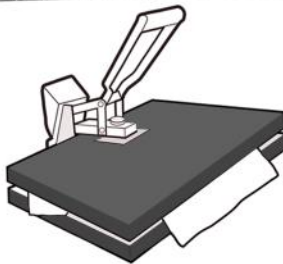

Brick HTV is suitable for all cotton and polycotton fabrics.

Using a medium / firm pressure Brick HTV should be applied at 140°C to 150°C for 9 seconds on the front, followed by a further 8 second press on the reverse side.

IF USING A DOMESTIC IRON

Ensure the garment is on a hard, flat surface and gently iron over the fabric to remove any creases or residual moisture. **Do not use steam** With the iron set to the cotton temperature, firmly press the iron onto the protective sheet for 9 seconds. Carefully take off the silicone sheet and remove the clear transfer liner. Replace silicone sheet over the transfer and iron for one second increments until the transfer is fully pressed. From the reverse side, press for a further 8 seconds to ensure a perfect bond.

5



Remove the silicone sheet and peel away the clear transfer liner whilst the material is still warm.



Not recommended for Nylon Fabrics

NOTE Leave for 24 hours before washing.

Application & Wash Care Symbols

