


1

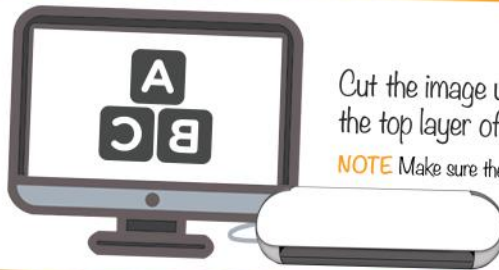

Cut the image using a plotter or contour cutter. Only cut the top layer of material and not the clear transfer liner.

**NOTE** Make sure the image is reversed in your cutting software.

2



Weed away any excess material until the finished image is left on the clear release liner.

This is called 'weeding'

**TIP** Weeding tweezers make this process quick and easy.


3

Pre-heat the T-shirt for 10 seconds to remove any moisture.

Place the image or design face down onto the garment. Once positioned cover the design using a silicone sheet for protection.



4

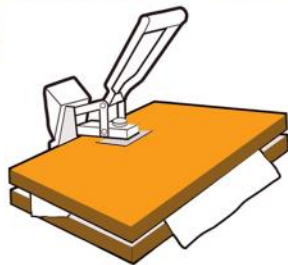

Using firm pressure press for 15 seconds at 160°C

#### IF USING A DOMESTIC IRON



Ensure the garment is on a flat surface and is crease free. Firmly & slowly iron over the protective sheet in both vertical and horizontal lines for 15 seconds.

5



**Warm Peel**

Remove the silicone sheet and peel away the clear transfer liner whilst the material is still warm.

**NOTE** Leave for 24 hours before washing.



Application & Wash Care Symbols

[www.gmcrafts.co.uk](http://www.gmcrafts.co.uk)

Reverse Image



Easy Weed



15 Sec Press



Firm



160°C



Domestic



Warm Peel



Machine Washable



Tumble Dry



Dry Clean

