

**INKJET DARK** can be used in most inkjet printers. **INKJET DARK** produces high resolution transfers for application to light and dark textiles. Transfers can be applied to cotton, polyester & poly-cotton textiles. **INKJET DARK** is easy to apply giving a soft and high quality result.

1



Inkjet Dark media requires your image to be printed onto the plain side of the material.

Always single sheet feed the transfer media. Allow the ink to dry and **DO NOT** apply until 10 minutes after printing

**TIP** In general we suggest the printer settings are set to plain paper & fine or photo quality. Settings on printers do vary, therefore it is also recommended to do a test to determine the best settings.

2



Once the image has been printed carefully trim around the design using scissors or a craft knife.

#### ALTERNATIVELY

Inkjet Dark can be cut using most plotter cutters.


Ensure all white areas surrounding the design are trimmed away.



3

Pre-heat the T-shirt for 3 to 4 seconds to remove any moisture.

Remove the backing paper and position the design on the T-shirt. Always cover the transfer with silicone paper during heat press application. Not suitable for textiles dyed with sublimation inks.

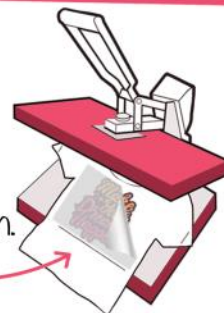

4



Using medium pressure press for 20 seconds at 160°C

#### IF USING A DOMESTIC IRON



Ensure the garment is on a flat surface and is crease free. Firmly & slowly iron over the protective sheet in both vertical and horizontal lines for 20 seconds.

5



Once pressed leave the transfer to cool before removing the silicone paper. (Cold Peel)

After the transfer has been removed stretch the T-shirt in both directions. This helps to give a soft feel.

Textiles should be washed inside out on a cool temperature.

**DO NOT** tumble dry, dry clean or iron directly over the transfer.

