


APPLICATION GUIDE

LIGHTactiv

1

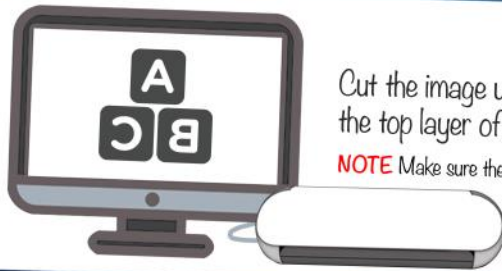

Cut the image using a plotter or contour cutter. Only cut the top layer of material and not the clear transfer liner.

NOTE Make sure the image is reversed in your cutting software.

2



Weed away any excess material until the finished image is left on the clear release liner.

This is called 'weeding'

TIP Weeding tweezers make this process quick and easy.

3

Pre-heat the T-shirt for 10 seconds to remove any moisture.

Place the image or design face down onto the garment. Once positioned cover the design using a silicone sheet for protection.



4



Using medium pressure press for 8-10 seconds at 140°C to 150°C

IF USING A DOMESTIC IRON



Ensure the garment is on a flat surface and is crease free. Firmly & slowly iron over the protective sheet in both vertical and horizontal lines for 10 seconds.

5



Cool Peel

Remove the silicone sheet and peel away the clear transfer liner when the material has been left to cool down.

NOTE Leave for 24 hours before washing.



Application & Wash Care Symbols

www.gmcrafts.co.uk

