


NYLONPRESS

To ensure the best possible results, please test each garment before production. Put a drop of water on the garment. If it stays on the material and only moves a bit when moving the garment then Nylon Press should be the ideal film to be used.

1

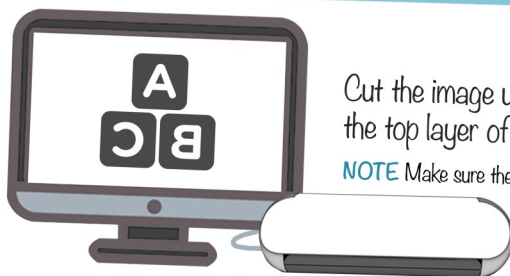

Cut the image using a plotter or contour cutter. Only cut the top layer of material and not the clear transfer liner.

NOTE Make sure the image is reversed in your cutting software.

2



Weed away any excess material until the finished image is left on the clear release liner.


This is called 'weeding'

TIP Weeding tweezers make this process quick and easy.


3

Pre-press your textile for 10 seconds to remove any moisture & ensure a flat surface for transfer.

Place the image or design face down onto the garment. Once positioned cover the design using a silicone sheet for protection.

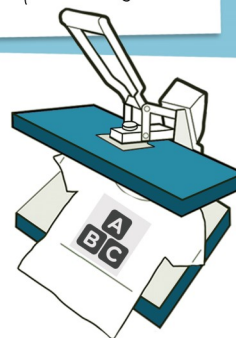

4

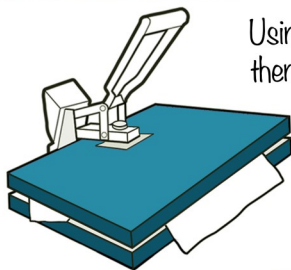

Using medium pressure (3-4 bar) press for 5 seconds to fix the design, then press for a further 10 seconds at 150°C

IF USING A DOMESTIC IRON



Ensure the garment is on a flat surface and is crease free.
Iron firmly & slowly over the protective sheet in both vertical and horizontal lines for 5 seconds.
This will fix the design, then press again for a further 10 seconds.

5



Warm Peel

Remove the silicone sheet and peel away the clear transfer liner whilst the material is still warm.

NOTE Leave for 24 hours before washing & stretching.

