


Sublistop is a collection of 14 colours, which are thin and opaque PU films with a blockout layer and have a matt finish. Suitable for sublimated garments and textiles.


1

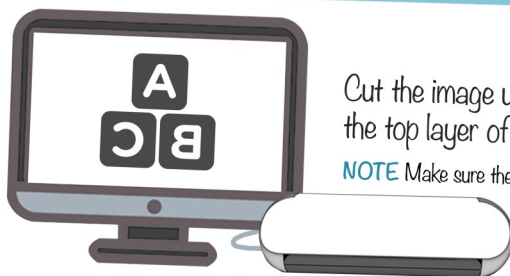

Cut the image using a plotter or contour cutter. Only cut the top layer of material and not the clear transfer liner.

NOTE Make sure the image is reversed in your cutting software.

2

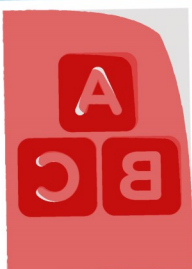

Weed away any excess material until the finished image is left on the clear release liner.

This is called 'weeding'

TIP Weeding tweezers make this process quick and easy.


3

Do not pre-press the garment.

Ensure a flat surface for transfer and place the image or design face down onto the garment. Once positioned cover the design using a silicone sheet for protection.



4

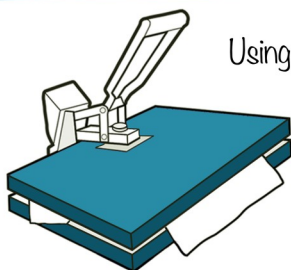

Using medium pressure (3-4 bar) press for 10 seconds at 140°C

IF USING A DOMESTIC IRON



Ensure the garment is on a flat surface and is crease free. With a **medium** heat, Iron firmly & slowly over the protective sheet in both vertical & horizontal lines for 10 seconds.

5



Warm Peel

Remove the silicone sheet and peel away the clear transfer liner whilst the material is still warm.

NOTE Leave for 24 hours before washing & stretching.

